


INSTRUCTION MANUAL VARUNA SHOWER BASE

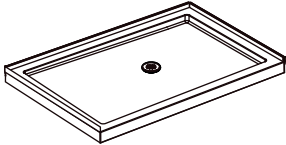

Dear Customer,
Thank you for purchasing this product.
To ensure best possible performance, please READ,
FOLLOW, AND KEEP THESE INSTRUCTIONS.

Note: Product may differ from picture.

CAUTION

Regular disinfection provides an effective defence against various types of bacteria that can develop in deposits that build up over time in all bathtubs and showers.

The clear panels, base and walls can be cleaned with a mild detergent solution, rinsed well and blotted dry with a chamois or soft cloth. Use a window glass cleaner for more stubborn stains but wipe off the surface immediately after applying the cleaner.

The base, walls and painted aluminum surfaces can be cleaned and their lustre restored with a mild automotive wax/polish (the wax will fill small scratches so surfaces will stay cleaner longer). Do not use rubbing compound; test the polish on a small area before using it on a particularly visible spot.

WARRANTY

Thank you for purchasing this shower base. This product has been designed to the highest quality standards and is guaranteed for 12 months for domestic use against manufacturing defects from the date of purchase. This warranty does not affect your statutory rights.

The shower base is guaranteed if used for normal trade purposes and is valid for the original buyer only. Any warranty is deemed invalid if the shower base has been improperly used or subject to neglect. The product is recommended for residential and non-commercial use. No warranty applies to commercial use. Tactical Distribution is not responsible for any costs related to labour, injuries or any other loss incurred during the product installation, repair or replacement, including any indirect or consequential damages. Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.

CARE AND CLEANING


Do not use abrasive cleaners, scrapers, metal brushes or any object or product that could scratch or dull the surface.

Paint stains: Use turpentine or a paint thinner to remove paint stains.


Joint compound: Use a plastic or wood spatula covered with a damp cloth. Do not use a metal blade or brush.


If a rubber mat is placed in the shower, it must be removed immediately after each use. Ignoring this recommendation will cause damage not covered by the warranty.

REQUIRED TOOLS/MATERIALS FOR INSTALLATION (NOT SUPPLIED)

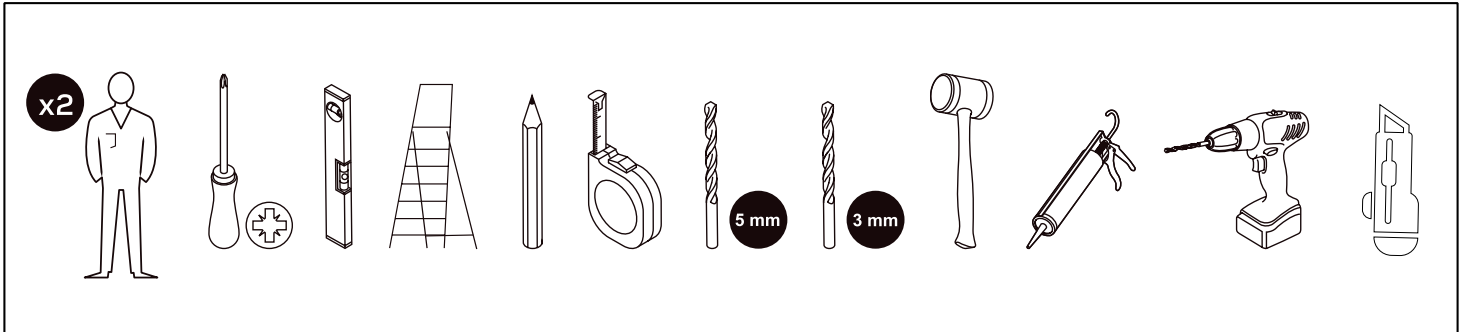


Parts and Components

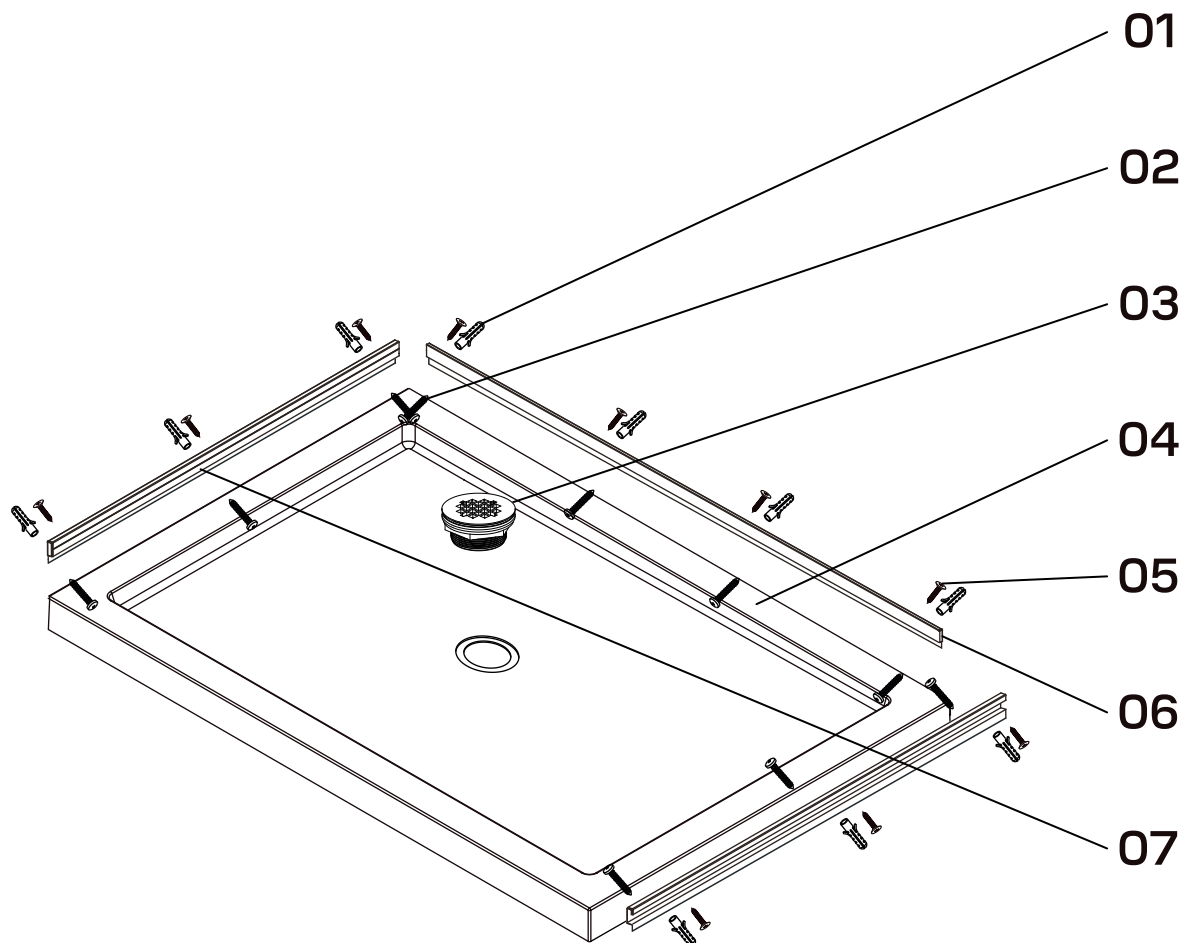


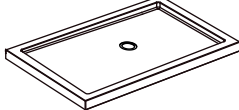1		x10
2	M4x45 	x10
3		x1
4		x1
5	M4x16 	x10
6		x1
7		x2





Base Installation

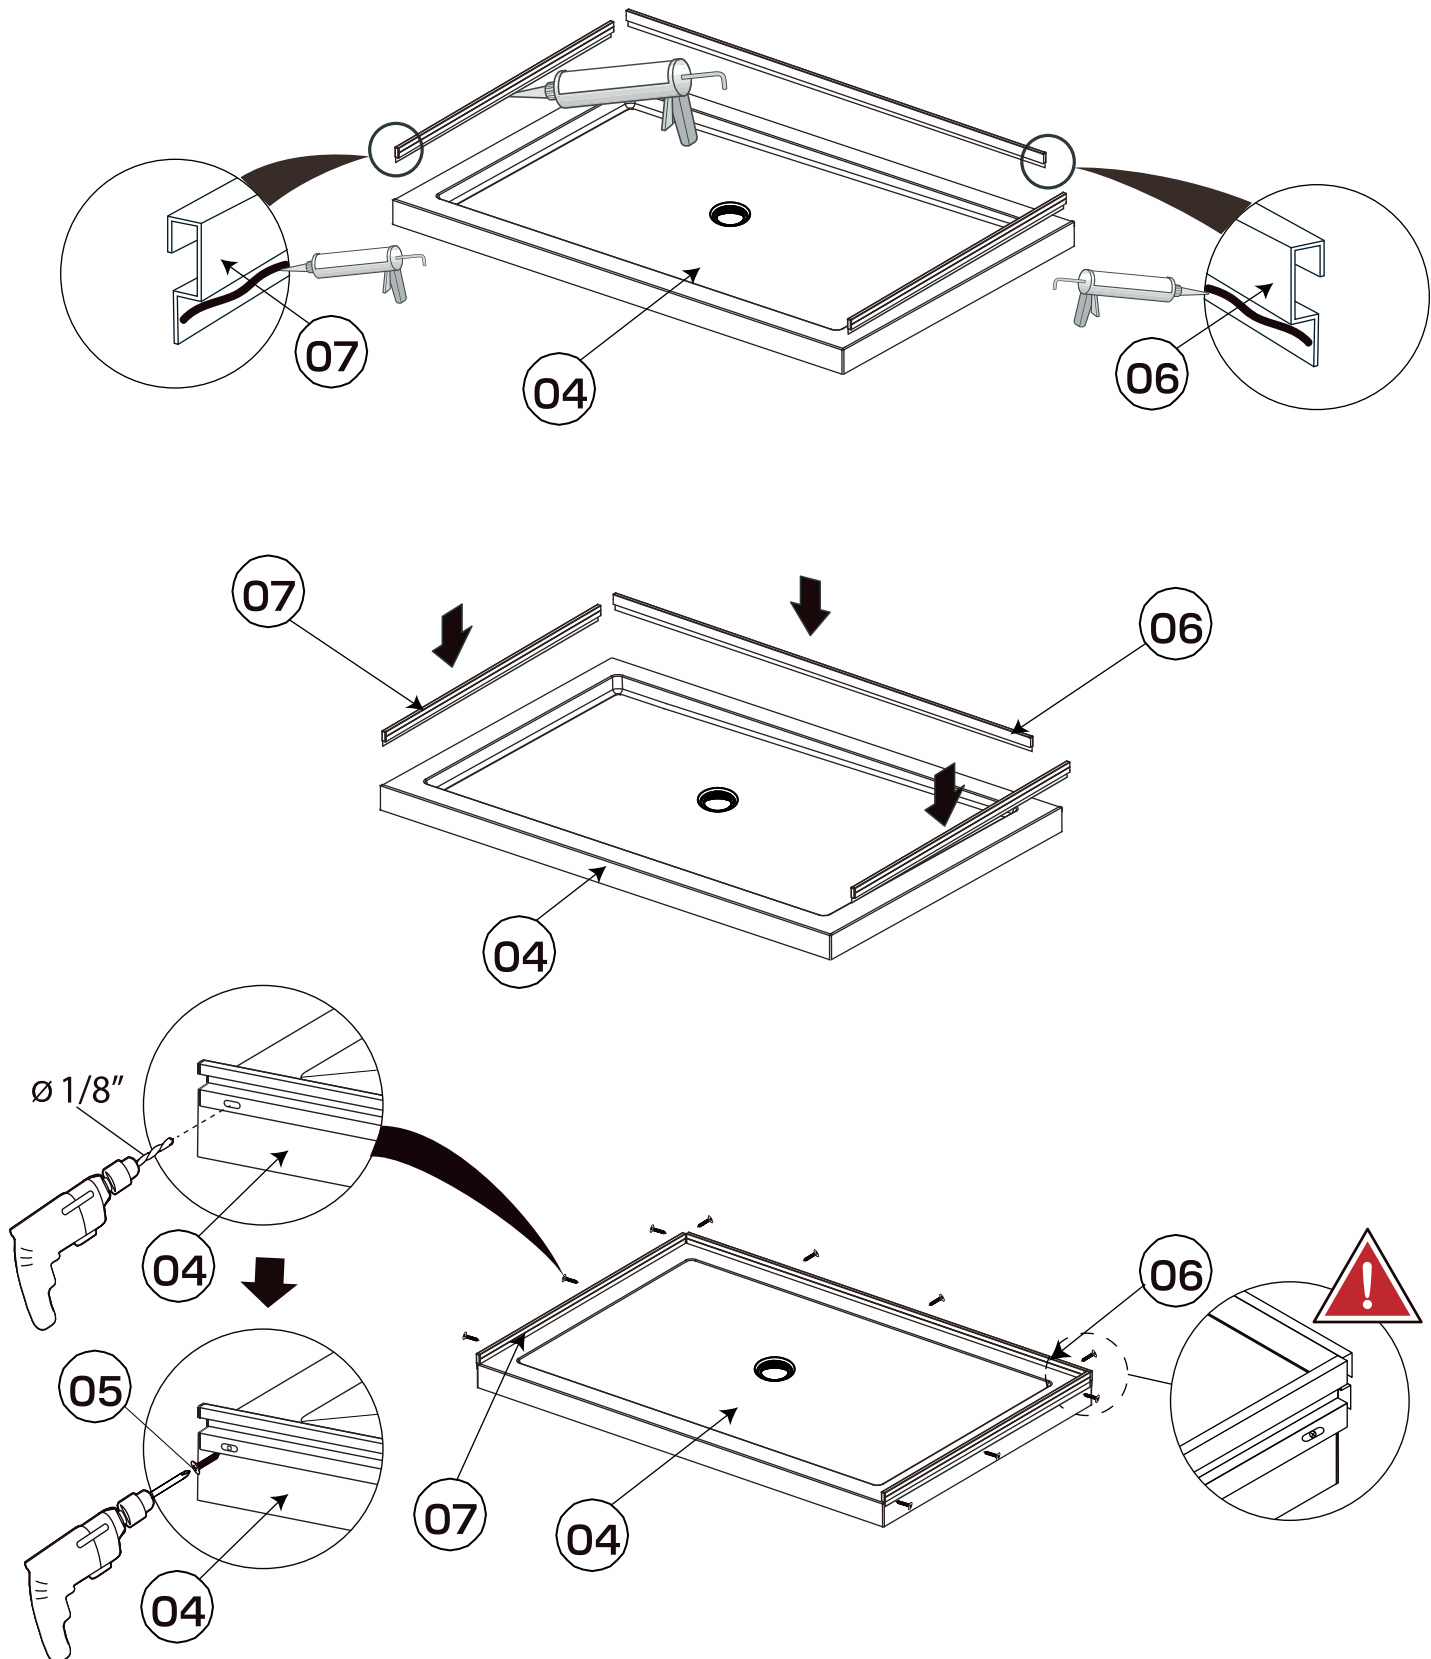


Base Installation

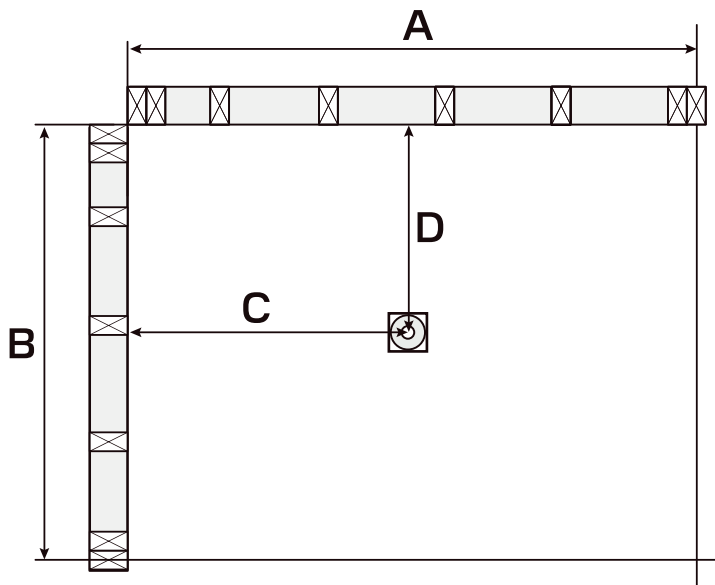


Model	A	B	C	D
40" x 32"	40"	32"	20"	16"

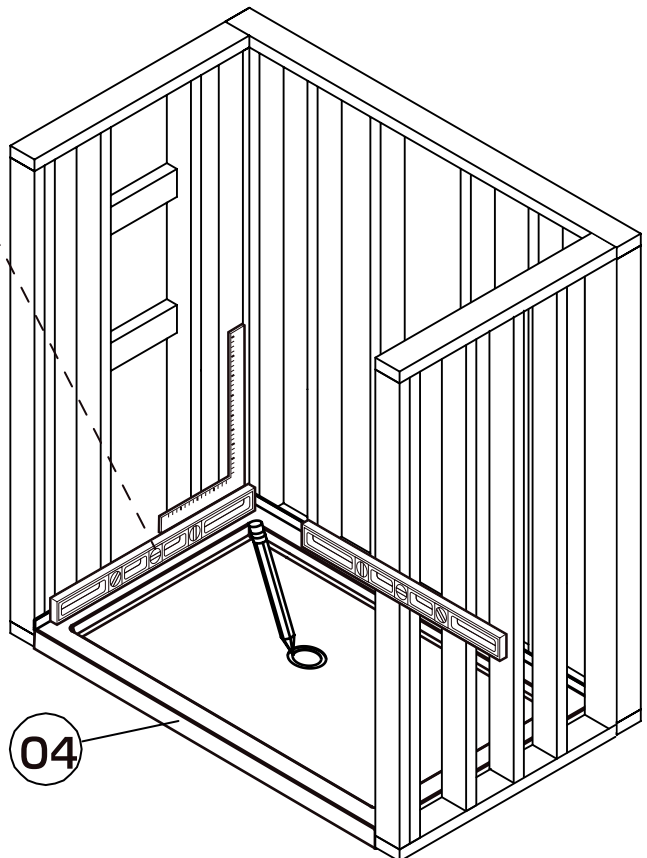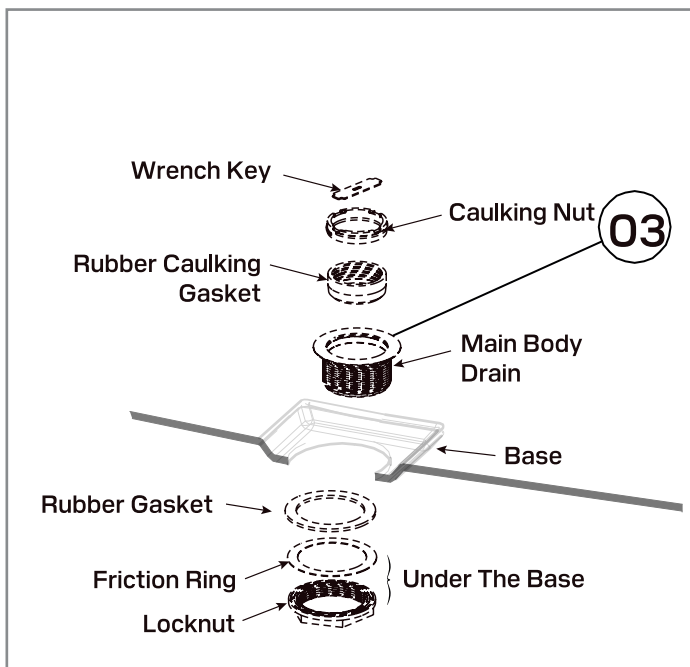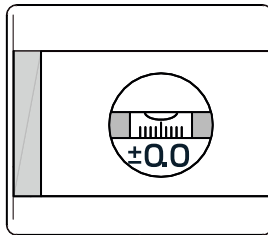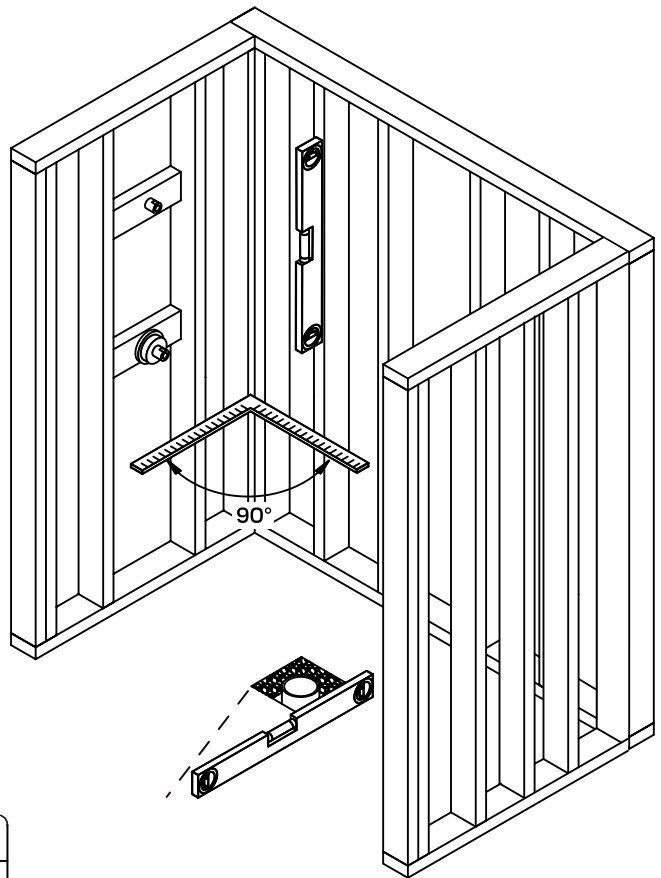




Base Installation

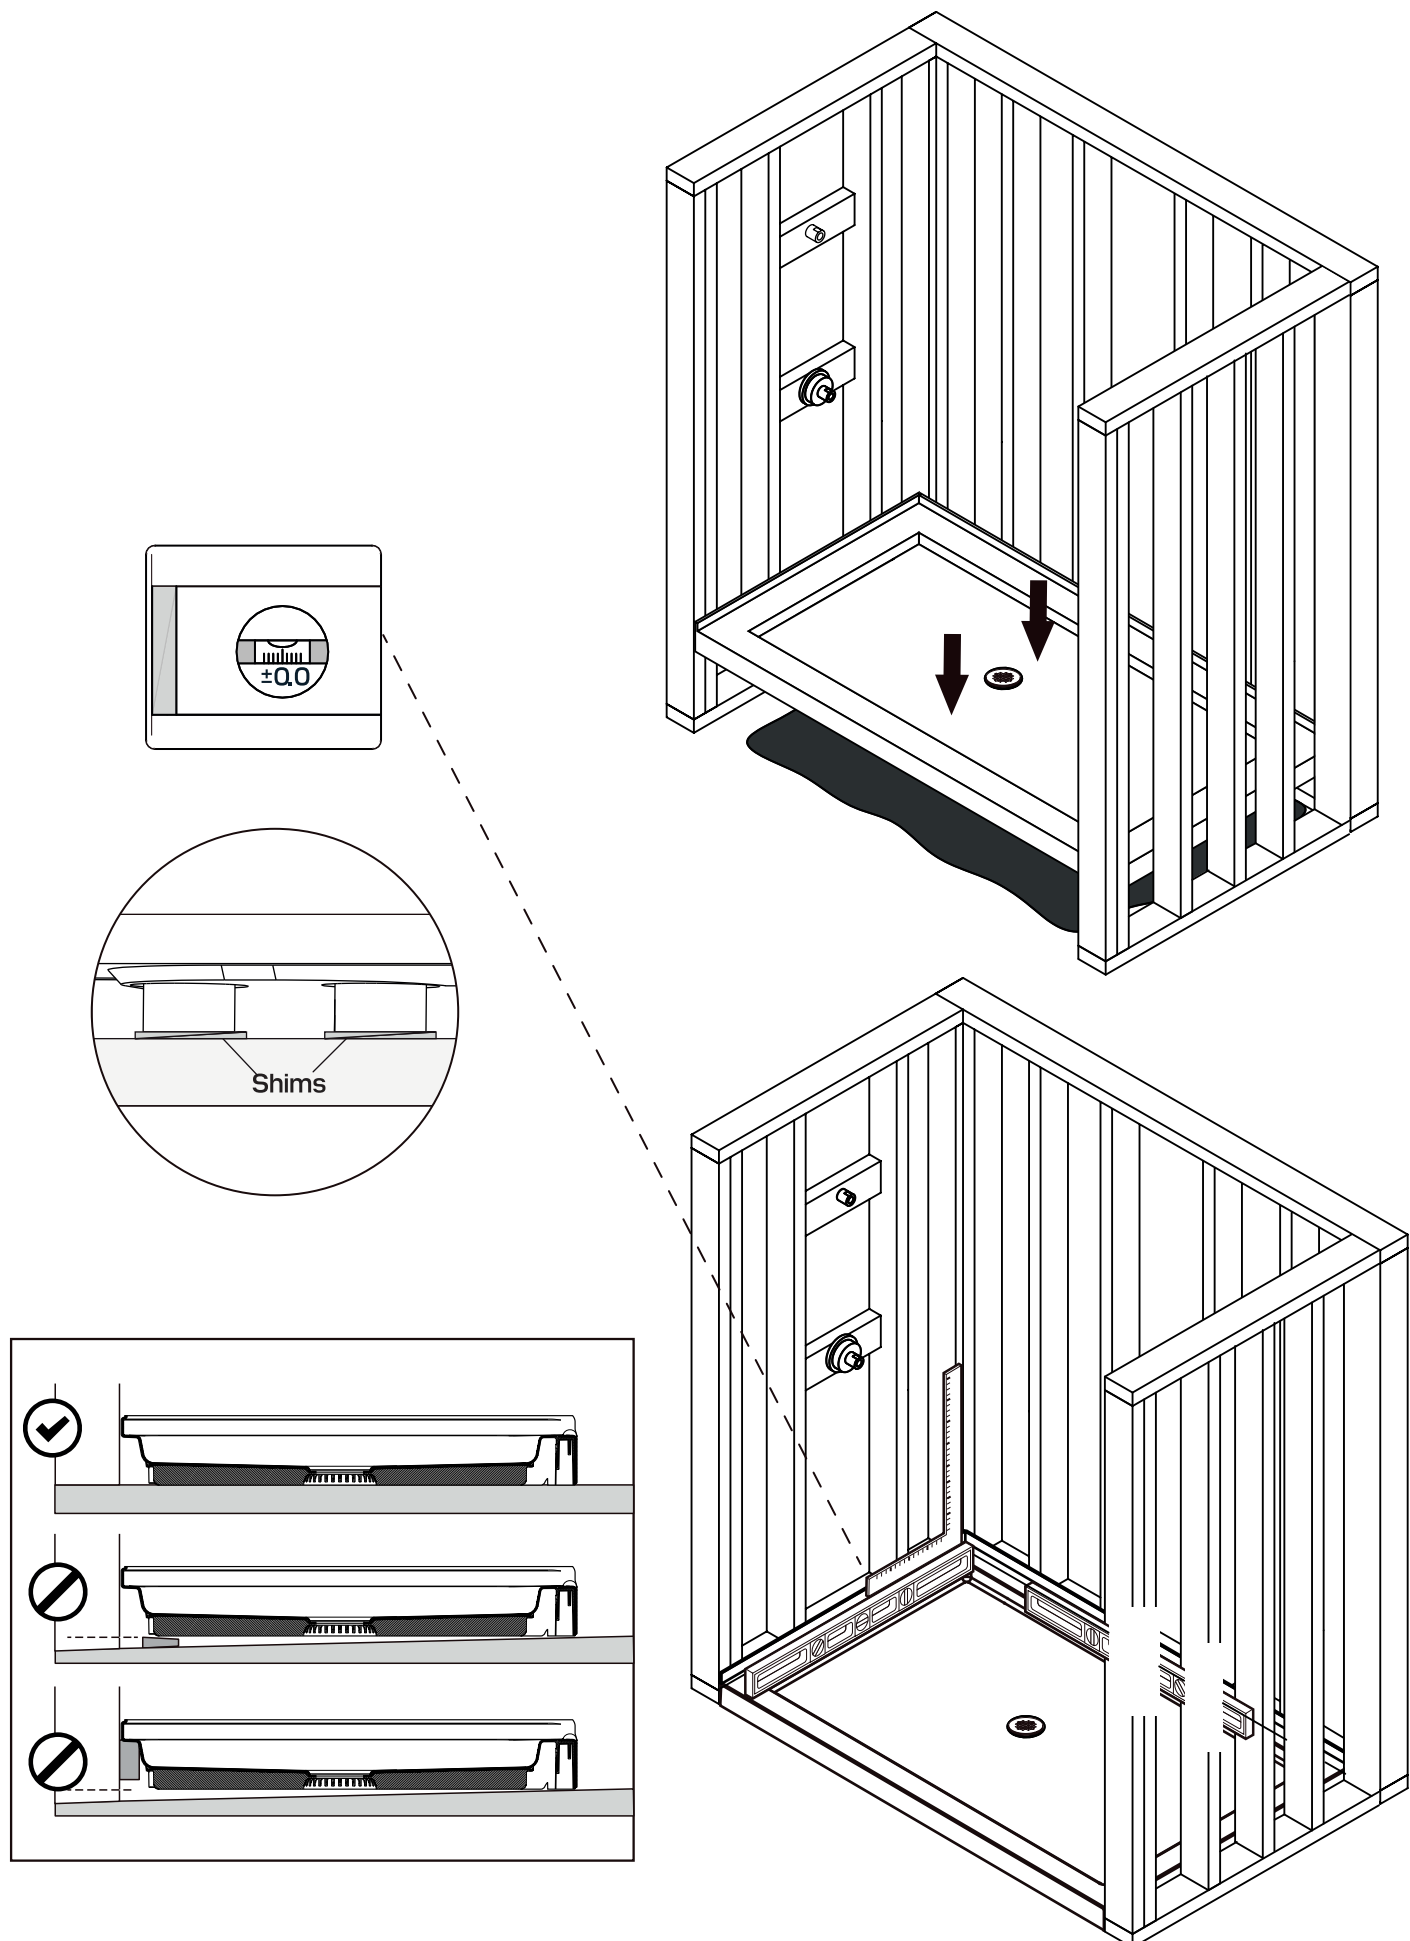

Base Installation

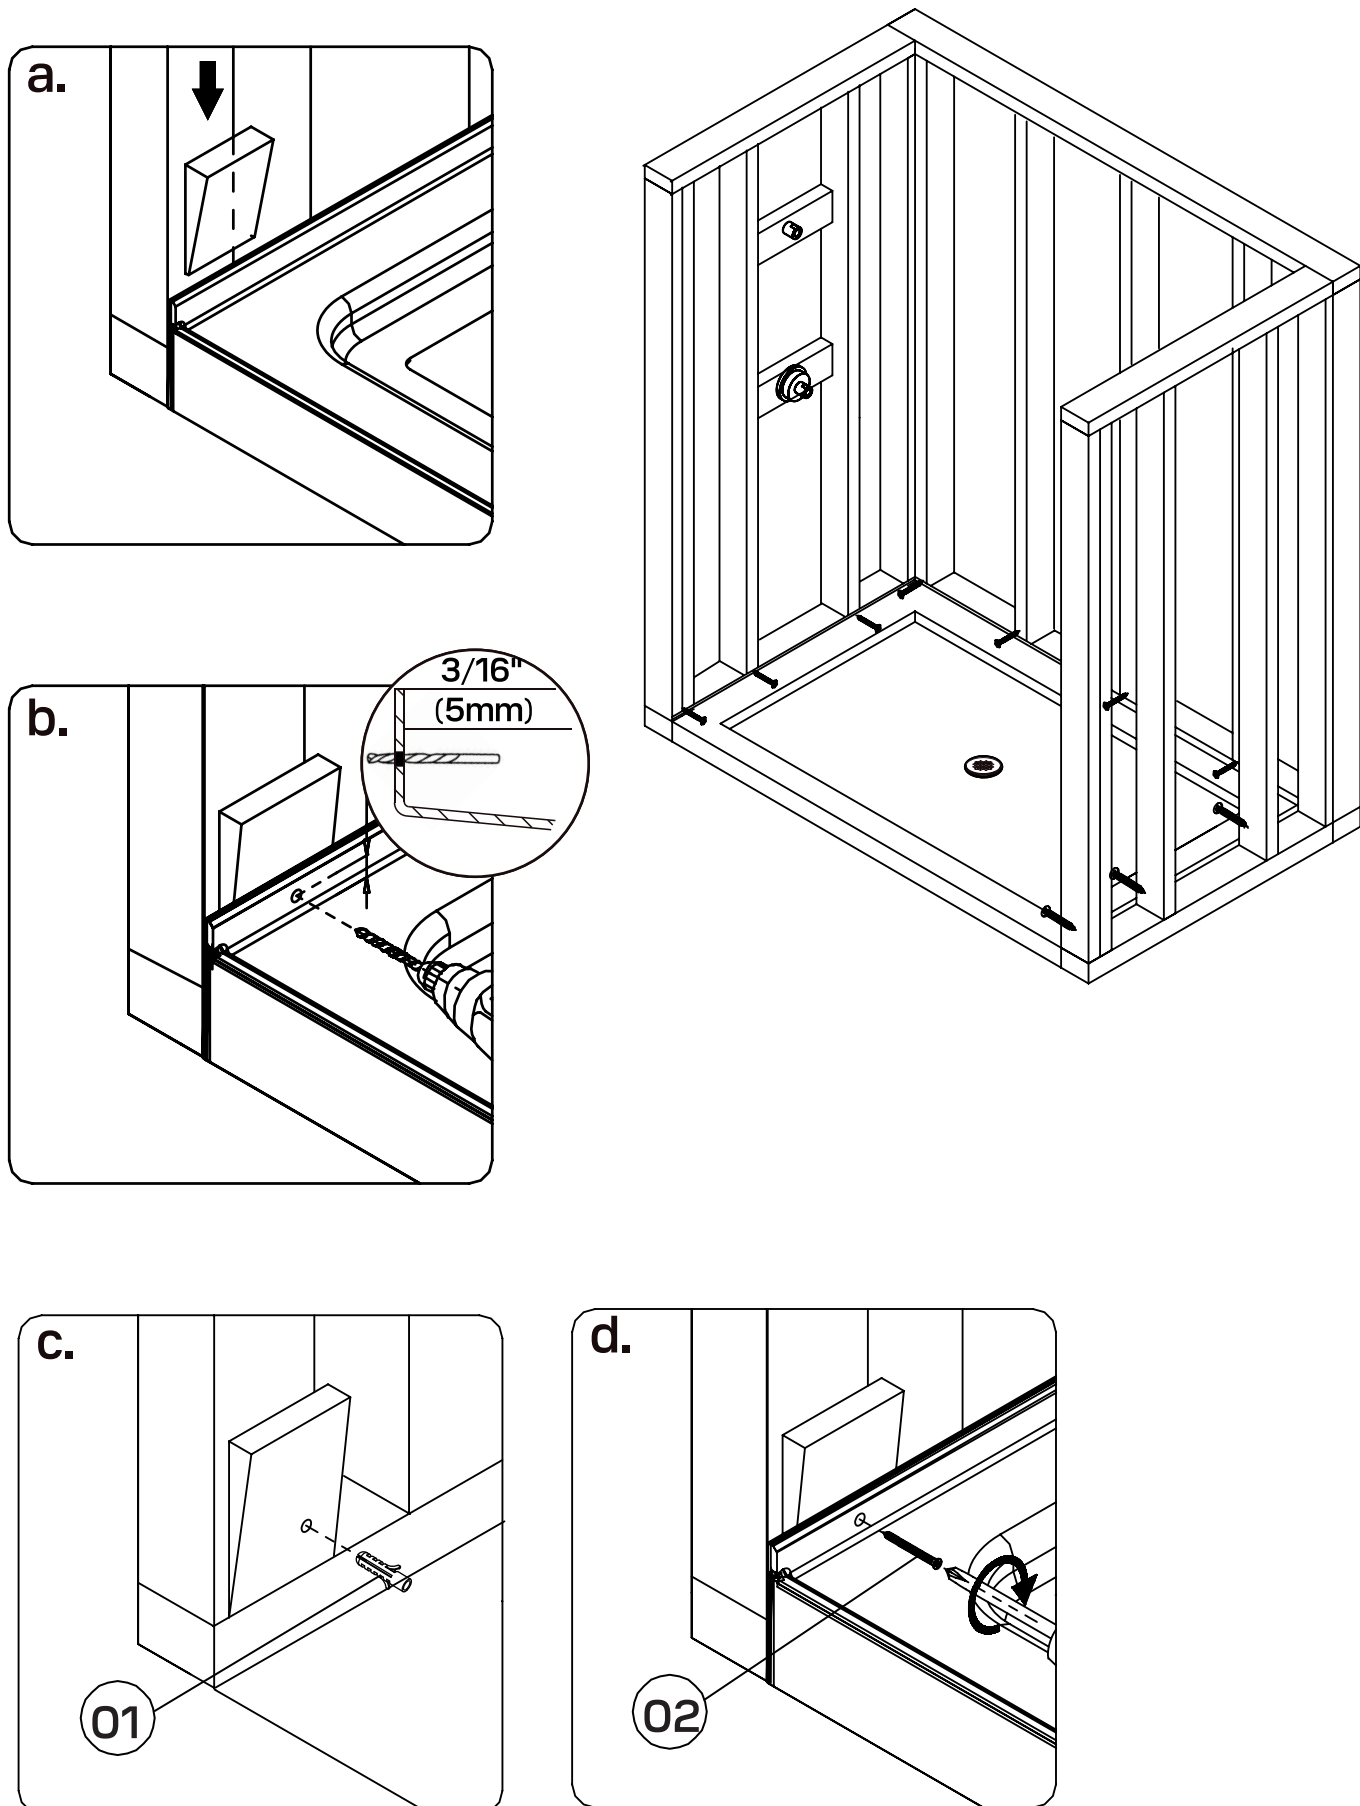

Base Installation

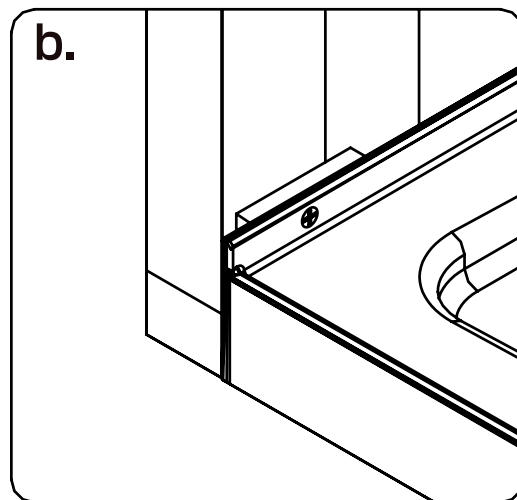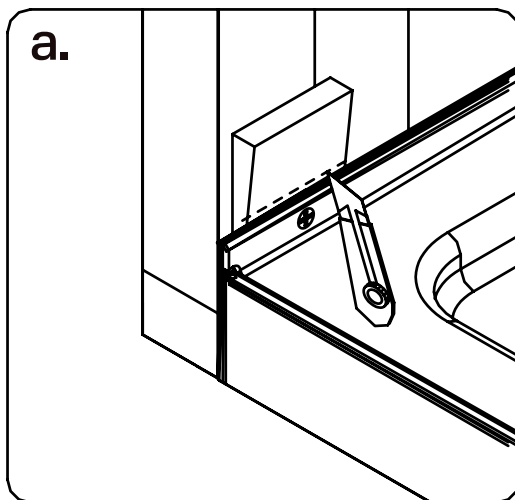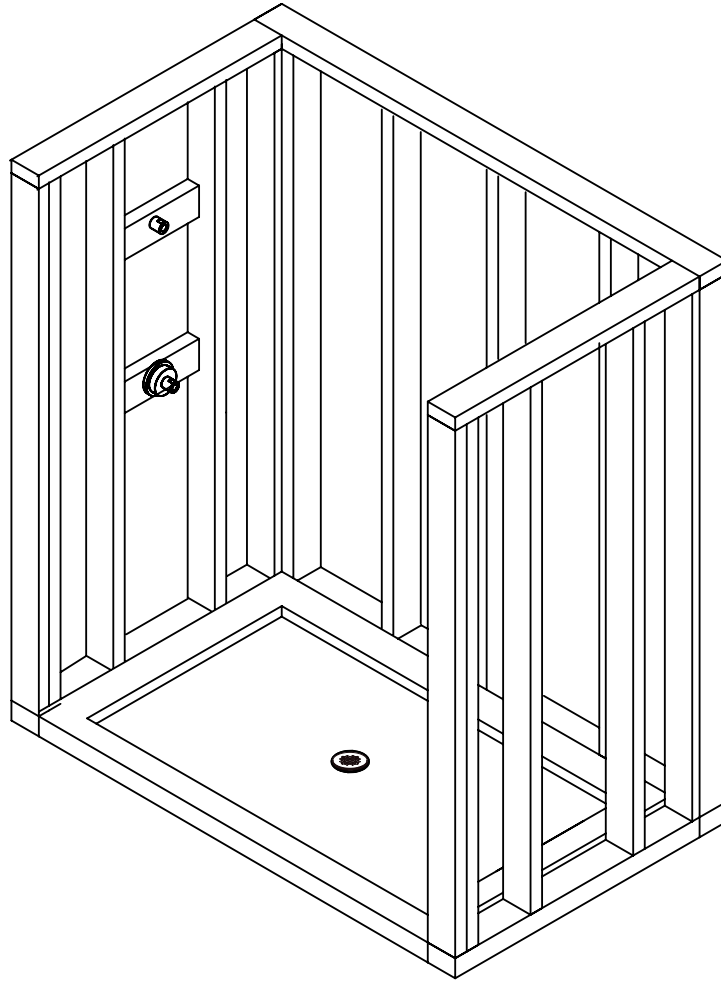

Base Installation

